

Printers and Labels

Useful links :

- ★ [Link to Zebra Site](#)
- ★ [Presentation - Label/printers](#)
- ★ [Service One](#)

1.What is the printer's specification ?

Printer	Thermal transfer, in order to use less sensitive label to moisture, temperature and chemicals Zebra ZD421T, 8 points/mm (203 dpi), RTC, USB, BT (BLE), Ethernet, thermal transfer print width (max.); 104 mm
Ribbon	The size of the ribbon should on line with the label size ref: Resin 5095
Label	Quality Z-Ultimate 3000T size: setting will be set for the 60 mm* 30 mm Special 45*15 mm will be prepared

2.What are the steps to install the printer ?



1. Choose the right place for the printer with ethernet access
2. Ask for an activation of the plug if not => ask on [Service one](#) / ISSC (cf list in [slide](#))
3. Installation of ribbons/labels (pictures inside printer) and different guides
4. Print test (to see if anything is to adjust)
5. Fix the IP address => ask [Service one](#) to create a FIX address
6. Project team enters IP address into LIMS and adjust settings on servers

3.How to print a Label in Agilab OneLims ?

- You can select on this list the fractions you want to print, and click on "Print Label"

Search Fractions

+ New Print Label Open Put to waste

Fractions


Search 3. C - Delivered Fractions Rows 25 Actions

Status = 'Delivered'

	-	Active	Fraction Id	Status	QR Code	External Identification	Product Name
	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	CHMO-AAAAAKJN-F-1	Delivered	FRN-AM85	81873	Methanol / SINOPHARM / -
	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	CHMO-AAAAAKJO-F-1	Delivered	FRN-AM86	82091	ACTICIDE MBS / THOR SPECIALTIES / -
	<input type="checkbox"/>	<input checked="" type="checkbox"/>	CHMO-AAAAAKJP-F-1	Delivered	FRN-AM87	76837	ISOPAR L / - / -
	<input type="checkbox"/>	<input checked="" type="checkbox"/>	CHMO-AAAAAKJQ-F-1	Delivered	FRN-AM88	81823	Triethanolamine puriss. p.a., ≥99% (GC) / SIGMA ALDRICH / 33729

○ You will have a pop up that appears, you will be able to select :

- The name of the printer you want to choose (of your default location) : ex Bristol ZD420
- Choose the label (only label linked to the former printer are reachable)
- Select the number of the copies
- Click on the button Print

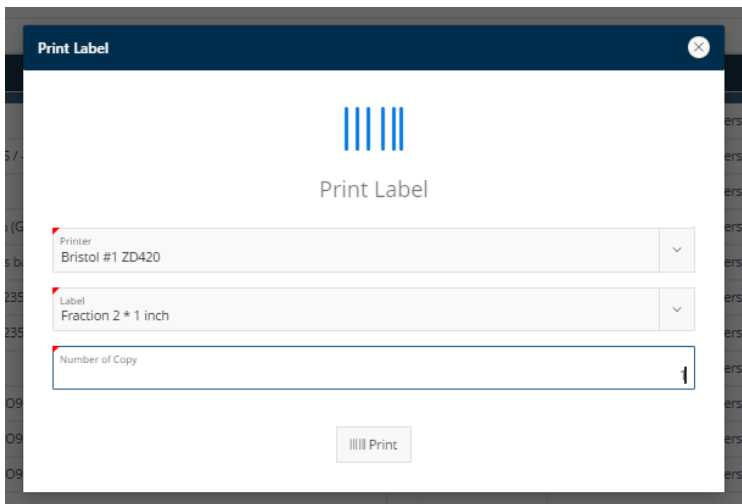

4 - Request to install a new printer :

- 1 - Connect on [service one](#)
- 2 - Click on "Catalog" on the top of the page
- 3 - Open the menu "Browse categories"
- 4 - Select "Workplace services" > "Printing" > "Office Automation printing"
- 5 - Select the box " Office Automation Printing" to complete the form and send the request

Service ONE | Home | My Activity | Catalog | Chat Bot

Q Hello, how can I help you?

Browse categories x

- Feedback & Change Requests
- Financial Services >
- Human resources >
- Industrial >
- IT Foundation >
- On/Offboarding >
- Procurement >
- Productivity and Collaboration >
 - Automat PC (LABPC & KIOSK)
 - Collaboration services >
 - Computers & Accessories >
 - Conferencing
 - End User Mobility >
 - Google Suite
 - Printing >
 - Office Automation Printing
 - Regulatory Labels
 - Telephony & Fixed Voice Solution >
- Research & Innovation >
- Robotic Process Automation (RPA)
- SAP
- Security and compliance >
- Supply Chain >
- Travel & Expenses (T&E) >
- Workplace Services >

Application Access Request (Generic)


GT-LAN Service Requests

SAP Evolution

LABPC R&I

Smartphone or Mobile | Workstation - | New/Remove/Loan

Office Automation Printing (1)



Office Automation Printing